

Eingestellter Midikanal

Set	Sound	Note	Midi	Instrument	Gerät
0	1	C	36	Bassdrum	Linn 1
0	2	C#	37	Rimshot	Drumtracks
0	3	D	38	Snaredrum	Linn 1
0	4	D#	39	Handclap	MFB-401
0	5	E	40	Snare Drum	TR-808
0	6	F	41	Low Tom	Linn 1
0	7	F#	42	Clodes HH	TR-808
0	8	G	43	Mid Tom	Linn 1
0	9	G#	44	Pedal HH	TR-808
0	10	A	45	High Tom	Linn 1
0	11	A#	46	Long HH	TR-808
0	12	H	47	Low Tom	Korg DDD1
1	1	c	48	Mid Tom	Korg DDD1
1	2	c#	49	Cymbal	TR-909
1	3	d	50	High Tom	Korg DDD1
1	4	d#	51	Cymbal	Drumulator
1	5	e	52	Cymbal	Korg DDD1
1	6	f#	53	Cymbal	Drumulator
1	7	f#	54	Tamborine	Linn 1
1	8	g	55	Cymbal	Linn 1
1	9	g#	56	Cowbell	TR-808
1	10	a	57	Cymbal	Drumtracks
1	11	a#	58	Cowbell	Rhythm Ace
1	12	h	59	Cymbal	TR-808
2	1	c1	60	High Bongo	TR-727
2	2	c1#	61	Low Bongo	TR-727
2	3	d1	62	Short Conga	Linn 1
2	4	d1#	63	High Conga	Linn 1
2	5	e1	64	Low Conga	Linn 1
2	6	f1	65	Cowbell	Korg-220
2	7	f1#	66	Low Tom	Korg-220
2	8	g1	67	High Space	El-Harmonix
2	9	g1#	68	Low Space	El-Harmonix
2	10	a1	69	High Tom	MFB-501
2	11	a1#	70	Mid Tom	MFB-501
2	12	h1	71	Low Tom	MFB-501
3	1	c2	72	Mabdclap	Vermona
3	2	c2#	73	Handclap	TR-808
3	3	d2	74	Snaredrum	TR-808
3	4	d2#	75	Open Hihat	Casio PT68
3	5	e2	76	Close Hihat	MFB-501
3	6	f2	77	Low Tom	MFB-501
3	7	f2#	78	Bass Drum	Simmons
3	8	g2	79	Handclap	Simmons
3	9	g2#	80	Snare Drum	Simmons
3	10	a2	81	Low Tom	Simmons
3	11	a2#	82	MidTom	Simmons
3	12	h2	83	High Tom	Simmons

Eingestellter Midikanal

Set	Sound	Note	Midi	Instrument	Gerät
4	1	c3	84	Bassdrum	MFB-512
4	2	c3#	85	Handclap	MFB-512
4	3	d3	86	Snaredrum	MFB-512
4	4	d3#	87	Open Hihat	MFB-512
4	5	e3	88	Close Hihat	MFB-512
4	6	f3	89	Low Tom	MFB-612
4	7	f3#	90	Low Tom	MFB-512
4	8	g3	91	Mid Tom	MFB-612
4	9	g3#	92	Mid Tom	MFB-512
4	10	a3	93	High Tom	MFB-612
4	11	a3#	94	High Tom	MFB-512
4	12	h3	95	Cymbal	MFB-512

Eingestellter Midikanal + 1**Set Sound Note Midi Instrument Gerät**

5	1	C	36	Bassdrum	TR-909
5	2	C#	37	Handclap	TR-909
5	3	D	38	Snaredrum	TR-909
5	4	D#	39	Open Hihat	TR-909
5	5	E	40	Close Hihat	TR-909
5	6	F	41	Conga	TR-727
5	7	F#	42	Low Tom	TR-909
5	8	G	43	Low Bongo	TR-727
5	9	G#	44	Mid Tom	TR-909
5	10	A	45	High Bongo	TR-727
5	11	A#	46	High Tom	TR-909
5	12	H	47	Cymbal	TR-909

6	1	c	48	Bassdrum	Linn1
6	2	c#	49	Handclap	Linn1
6	3	d	50	Snaredrum	Linn1
6	4	d#	51	Open Hihat	Linn1
6	5	e	52	Close Hihat	Linn1
6	6	f#	53	Cowbell	Linn1
6	7	f#	54	Low Tom	Linn1
6	8	g	55	Low Conga	Linn1
6	9	g#	56	Mid Tom	Linn1
6	10	a	57	High Conga	Linn1
6	11	a#	58	High Tom	Linn1
6	12	h	59	Cymbal	Linn1

7	1	c1	60	Bassdrum	Drumulator
7	2	c1#	61	Handclap	Drumulator
7	3	d1	62	Snaredrum	Drumulator
7	4	d1#	63	Open Hihat	Drumulator
7	5	e1	64	Close Hihat	Drumulator
7	6	f1	65	Cowbell	Drumulator
7	7	f1#	66	Low Tom	Drumulator
7	8	g1	67	Tambourine	Linn1
7	9	g1#	68	Mid Tom	Drumulator
7	10	a1	69	Clave	Drumulator
7	11	a1#	70	High Tom	Drumulator
7	12	h1	71	Cymbal	Drumulator

8	1	c2	72	Bassdrum	MFB-512
8	2	c2#	73	Handclap	MFB-512
8	3	d2	74	Snaredrum	MFB-512
8	4	d2#	75	Open Hihat	MFB-512
8	5	e2	76	Close Hihat	MFB-512
8	6	f2	77	Low Tom	MFB-612
8	7	f2#	78	Low Tom	MFB-512
8	8	g2	79	Mid Tom	MFB-612
8	9	g2#	80	Mid Tom	MFB-512
8	10	a2	81	High Tom	MFB-612
8	11	a2#	82	High Tom	MFB-512
8	12	h2	83	Cymbal	MFB-512

Eingestellter Midikanal + 2**Set Sound Note Midi Instrument Gerät**

9	1	C	36	Bassdrum	Korg DDD1
9	2	C#	37	Handclap	Korg DDD1
9	3	D	38	Snaredrum	Korg DDD1
9	4	D#	39	Open Hihat	Korg DDD1
9	5	E	40	Close Hihat	Korg DDD1
9	6	F	41	Cowbell	Korg DDD1
9	7	F#	42	Low Tom	Korg DDD1
9	8	G	43	Low Conga	Korg-220
9	9	G#	44	Mid Tom	Korg DDD1
9	10	A	45	High Conga	Korg-220
9	11	A#	46	High Tom	Korg DDD1
9	12	H3	47	Cymbal	Korg DDD1

10	1	c	48	Bassdrum	Drumtracks
10	2	c#	49	Handclap	Drumtracks
10	3	d	50	Snaredrum	Drumtracks
10	4	d#	51	Open Hihat	Drumtracks
10	5	e	52	Close Hihat	Drumtracks
10	6	f	53	Cowbell	Drumtracks
10	7	f#	54	Low Tom	Drumtracks
10	8	g	55	Tambourine	Drumtracks
10	9	g#	56	Mid Tom	Drumtracks
10	10	a	57	Rimshot	Drumtracks
10	11	a#	58	High Tom	Drumtracks
10	12	h	59	Cymbal	Drumtracks

11	1	c1	60	Bassdrum	TR-808
11	2	c1#	61	Handclap	TR-808
11	3	d1	62	Snaredrum	TR-808
11	4	d1#	63	Open Hihat	TR-808
11	5	e1	64	Close Hihat	TR-808
11	6	f1	65	Cowbell	TR-808
11	7	f1#	66	Low Tom	TR-808
11	8	g1	67	Low Conga	TR-808
11	9	g1#	68	Mid Tom	TR-808
11	10	a1	69	High Conga	TR-808
11	11	a1#	70	High Tom	TR-808
11	12	h	71	Cymbal	TR-808

12	1	c2	72	Bassdrum	CR-78
12	2	c2#	73	Snaredrum1	CR-78
12	3	d2	74	Snaredrum2	CR-78
12	4	d2#	75	Open Hihat	CR-78
12	5	e2	76	Close Hihat	CR-78
12	6	f2	77	Cowbell	CR-78
12	7	f2#	78	Low Tom	CR-78
12	8	g2	79	Low Clave	CR-78
12	9	g2#	80	Mid Tom	CR-78
12	10	a2	81	High Clave	CR-78
12	11	a2#	82	High Tom	CR-78
12	12	h2	83	Cymbal	CR-8000

Eingestellter Midikanal + 3

Set	Sound	Note	Midi	Instrument	Gerät
13	1	C	36	Bassdrum	Simmons
13	2	C#	37	Handclap	Simmons
13	3	D	38	Snaredrum	Simmons
13	4	D#	39	Open Hihat	Simmons
13	5	E	40	Close Hihat	Simmons
13	6	F	41	Low Tom1	Simmons
13	7	F#	42	Low Tom2	Simmons
13	8	G	43	Mid Tom1	Simmons
13	9	G#	44	Mid Tom2	Simmons
13	10	A	45	High Tom1	Simmons
13	11	A#	46	High Tom2	Simmons
13	12	H	47	Cymbal	Pearl SC-40
14	1	c	48	Bassdrum	MFB-501
14	2	c#	49	Hand Clap	MFB-401
14	3	d	50	Snaredrum	MFB-501
14	4	d#	51	Open Hihat	MFB-501
14	5	e	52	Close Hihat	MFB-501
14	6	f	53	Guiro	TR-801
14	7	f#	54	Low Tom	MFB-501
14	8	g	55	Low Clave	MFB-501
14	9	g#	56	Mid Tom	MFB-501
14	10	a	57	High Clave	MFB-501
14	11	a#	58	High Tom	MFB-501
14	12	h	59	Cymbal	TR-606
15	1	c1	60	Bassdrum	KPR-77
15	2	c1#	61	Handclap	KPR-77
15	3	d1	62	Snaredrum	KPR-77
15	4	d1#	63	Open Hihat	KPR-77
15	5	e1	64	Close Hihat	KPR-77
15	6	f1	65	Cowbell	KPR-77
15	7	f1#	66	Low Tom	KPR-77
15	8	g1	67	Low Bongo	KPR-77
15	9	g1#	68	Mid Tom	KPR-77
15	10	a1	69	High Bongo	KPR-77
15	11	a1#	70	High Tom	KPR-77
15	12	h1	71	Cymbal	KPR-77
16	1	c2	72	Bassdrum	CASIO PT-68
16	2	c2#	73	Snaredrum1	CASIO PT-68
16	3	d2	74	Snaredrum2	CASIO PT-68
16	4	d2#	75	Open Hihat	CASIO PT-68
16	5	e2	76	Close Hihat	CASIO PT-68
16	6	f2	77	Claves	CASIO PT-68
16	7	f2#	78	Low Tom	CASIO PT-68
16	8	g2	79	Bassdrum	CASIO VL-1
16	9	g2#	80	Mid Tom	CASIO PT-68
16	10	a2	81	Snaredrum	CASIO VL-1
16	11	a2#	82	High Tom	CASIO PT-68
16	12	h2	83	Close Hihat	CASIO VL-1

Eingestellter Midikanal + 4

Set	Sound	Note	Midi	Instrument	Gerät
17	1	C	36	Bassdrum	Hohner
17	2	C#	37	Snaredrum1	Hohner
17	3	D	38	Snaredrum2	Hohner
17	4	D#	39	Open Hihat	Hohner
17	5	E	40	Close Hihat	Hohner
17	6	F	41	Cowbell	Hohner
17	7	F#	42	Low Tom	Hohner
17	8	G	43	Low Bongo	Hohner
17	9	G#	44	Mid Tom	Hohner
17	10	A	45	High Bongo	Hohner
17	11	A#	46	High Tom	Hohner
17	12	H	47	Cymbal	Hohner
18	1	c	48	Bassdrum	Vermona
18	2	c#	49	Hand Clap	Vermona
18	3	d	50	Snaredrum	Vermona
18	4	d#	51	Open Hihat	Vermona
18	5	e	52	Close Hihat	Vermona
18	6	f	53	Cowbell	Vermona
18	7	f#	54	Low Tom	Vermona
18	8	g	55	Low Bongo	Vermona
18	9	g#	56	Mid Tom	Vermona
18	10	a	57	High Bongo	Vermona
18	11	a#	58	High Tom	Vermona
18	12	h	59	Cymbal	Vermona
19	1	c1	60	Bassdrum	Rhythm-Ace
19	2	c1#	61	Rimshot	Rhythm-Ace
19	3	d1	62	Snaredrum	Rhythm-Ace
19	4	d1#	63	Open Hihat	Rhythm-Ace
19	5	e1	64	Close Hihat	Rhythm-Ace
19	6	f1	65	Cowbell	Rhythm-Ace
19	7	f1#	66	Low Tom	Rhythm-Ace
19	8	g1	67	Low Claves	Rhythm-Ace
19	9	g1#	68	Mid Tom	Rhythm-Ace
19	10	a1	69	High Claves	Rhythm-Ace
19	11	a1#	70	High Tom	Rhythm-Ace
15	12	h1	71	Cymbal	Solton
20	1	c2	72	Bassdrum	El.-Harmonix
20	2	c2#	73	Handclap	El.-Harmonix
20	3	d2	74	Snaredrum	El.-Harmonix
20	4	d2#	75	Open Hihat	El.-Harmonix
20	5	e2	76	Close Hihat	El.-Harmonix
20	6	f2	77	Claves	El.-Harmonix
20	7	f2#	78	Low Tom	El.-Harmonix
20	8	g2	79	Spacedrum1	El.-Harmonix
20	9	g2#	80	Mid Tom	El.-Harmonix
20	10	a2	81	Spacedrum2	El.-Harmonix
20	11	a2#	82	High Tom	El.-Harmonix
20	12	h2	83	Cymbal	BOSS 55